

Requirements


To update the firmware of your eNod4: you need:

- A computer with Windows 7 or higher
- The eNod4Loader software
- A USB type A type B cable (Printer like USB cable)

Procedure


To change the firmware of your eNod4:

- 1) Install eNod4Loader
- 2) Connect your eNod with the USB cable
- 3) Launch eNod4Loader

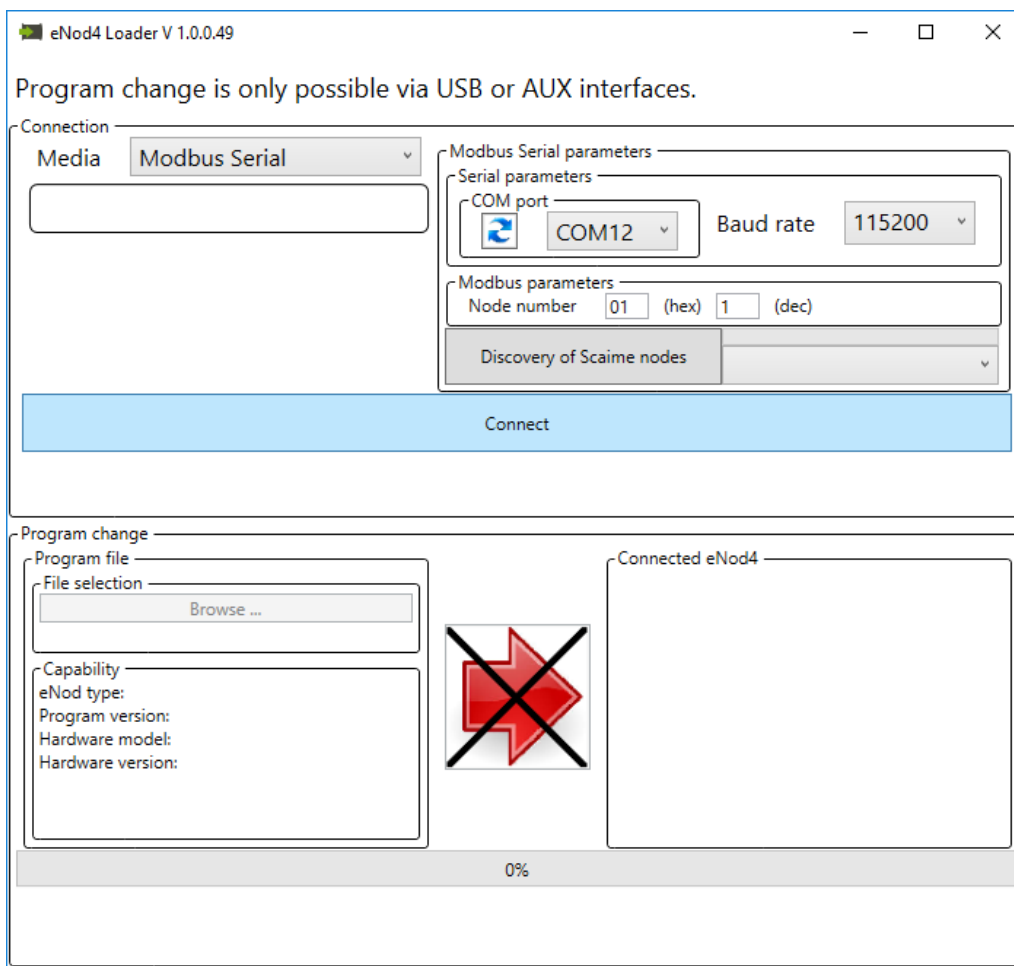

- 4) At top right, fill the com port, the address and the baud rate of your eNod (we advise you to set your eNod at 115200 bauds to reduce the transfer time: On your eNod: put the DIP switches 1 & 2 on "ON" and the DIP switches 3 & 4 on "OFF"

- 5) Click on connect
- 6) At bottom left of the window, click on browse and select the new firmware (1XX for standard les versions and 2XX for Ethernet versions). If the firmware matches, the arrow becomes green.

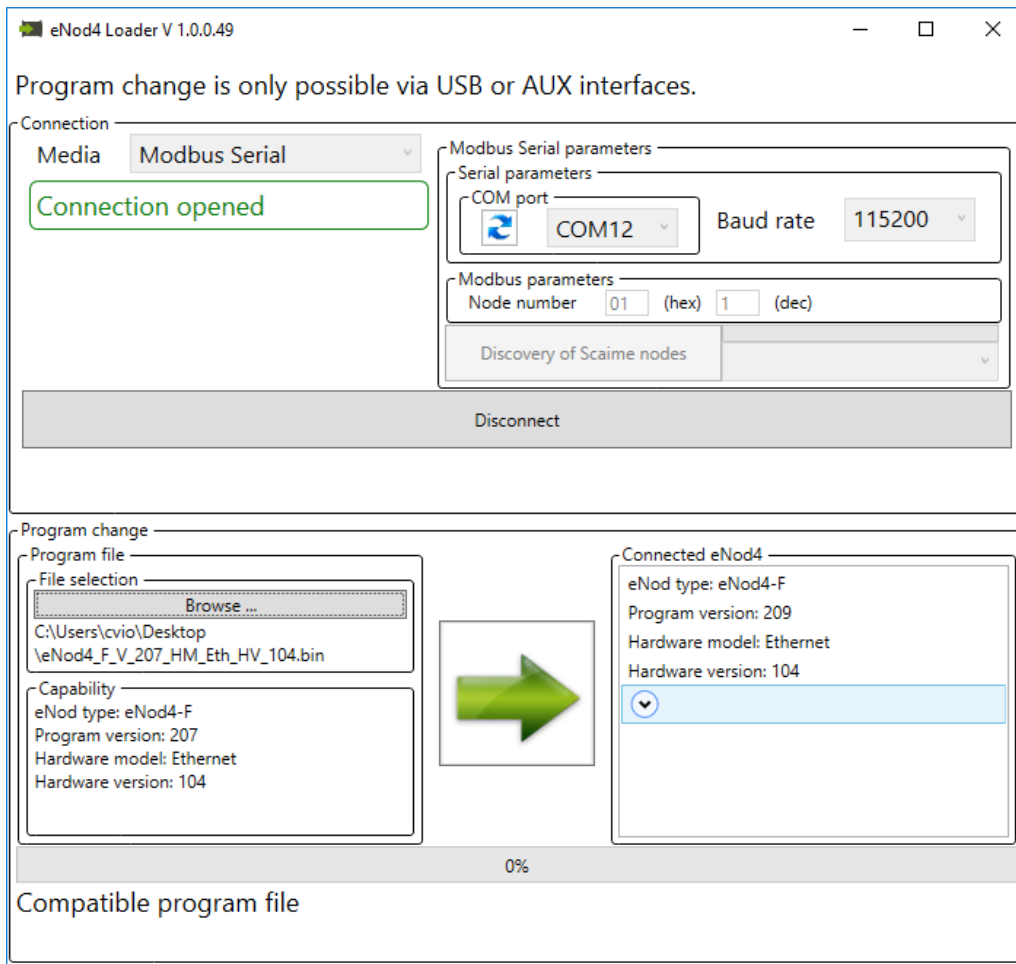

- 7) Click on the green arrow to start the update.